

5 PC INTERNAL AND EXTERNAL BEARING PULLER KIT

Product # H3562 | Model #



- Remove internal and external bearing cups, seals, bushings etc.
- Special cone adaptor included which securely locks jaws on part to be removed
- Use with slide hammer for more torque
- Comes in a convenient blow mould storage case
- Kit includes:
 - 2.7lb (1.24kg) Slide Hammer (5/8"-18 thread)
 - Two Internal 3-Jaw Sets (Capacity 10 - 30mm, 30 - 80mm)
 - External 3-Jaw Set (10 - 80mm)
 - Cone Adaptor

