
FALL SAFE™

USER INSTRUCTIONS FOR
STRONGBACK STANCHION STABILIZER BAR

Model # 6140-1

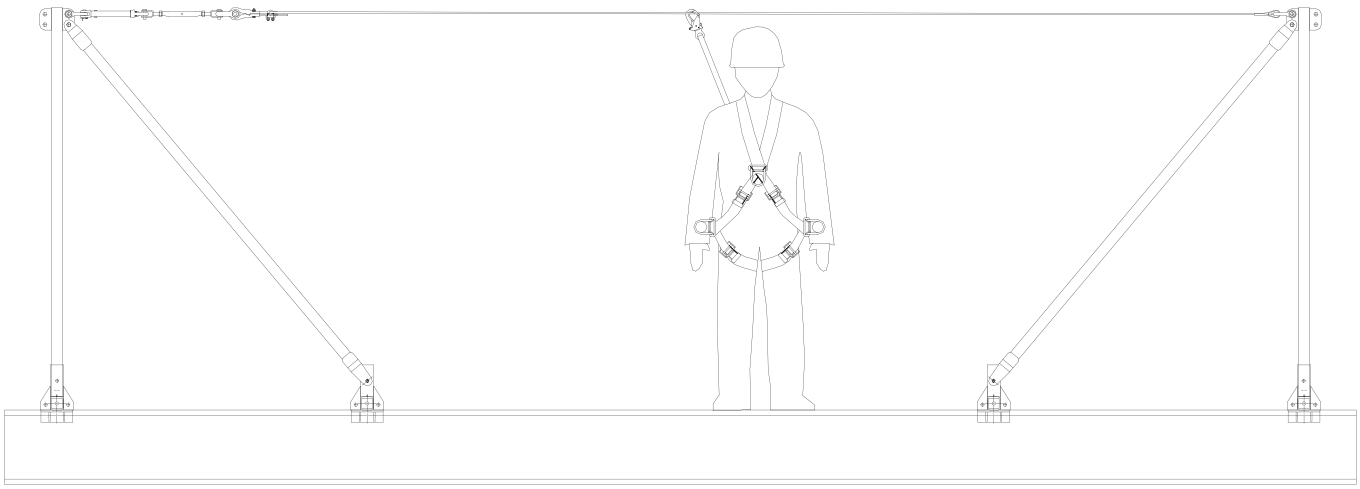

SureWerx®

FALL SAFE™
Ph. 1-800-323-7402

Canada labels
SureWerx, 49 Schooner St.
Coquitlam, BC V3K 0B3

USA labels
SureWerx USA Inc.
Elgin, IL USA 60123

Table of Contents

IMPORTANT INSTRUCTIONS! 03
SYSTEM DESCRIPTION 05
SPECIFICATIONS 05
TYPICAL STRONGBACK STANCHION STABILIZER BAR INSTALLATION 06
INSTALLATION CONSIDERATIONS 06
INSTALLATION PROCEDURES 07
TRAINING 08
PLANNING FOR RESCUE 08
INSPECTION 09
SERVICING 09
WARNINGS AND LIMITATIONS 09
GUARDING AGAINST APPLICATION FAILURE 10
INSPECTION LOG FOR THE STRONGBACK STANCHION STABILIZER BAR 11
WARRANTY 12

IMPORTANT INSTRUCTIONS!

These instructions must be kept on file and available for the users reference at **all** times. The users must read and fully understand these instructions or have the instructions explained in detail before using this equipment. **Failure to observe these instructions could result in serious injury or death.**

Prior to use, the user must be trained in the proper use of this equipment and the process or system in which it is used.

A review of the instructions and re-training should be repeated at regular intervals or whenever the review shows that additional instruction or training is needed.

A rescue plan must be prepared; the workers must be trained in its use, and rescue equipment must be on hand prior to any use of this or any other Personal Fall Protection Equipment.

Any questions regarding these instructions should be directed to:

Manufacturer's Name and Address

Fall Safe™
Canada labels
SureWerx, 49 Schooner St.
Coquitlam, BC V3K 0B3

USA labels
SureWerx USA Inc.
Elgin, IL USA 60123

IMPORTANT OSHA REGULATIONS COVERING THE USE OF HORIZONTAL LIFELINE SYSTEMS

OSHA 1910.66 Subpart M – 1926.502 (d)(8):

Horizontal Lifelines shall be designed, installed, and used under the supervision of a qualified person as part of a complete fall arrest system, which maintains a safety factor of at least two.

OSHA 1910.66 (b):

"Qualified Person" means one with a recognized degree or professional certificate and extensive knowledge and experience in the subject field who is capable of design, analysis, evaluation, and specifications in the subject work, project, or product.

OSHA 1910.66 (b):

"Competent Person" means a person who is capable of identifying hazardous or dangerous conditions in the personal fall arrest system or any component thereof, as well as in their application and use with related equipment

OSHA 1910.66:

Personal fall arrest systems shall be rigged such that an employee can neither free-fall more than 6- ft. nor contact any lower surface.

OSHA 1910.66 (n):

The sag in the lifeline should be minimized to prevent the connecting piece of equipment (self-retracting lanyard or other appropriate personal fall arrest device) from sliding down the lifeline to a position which creates a swing hazard during a fall arrest.

OSHA Standards, Interpretations and Compliance Letters, 02/09/1995-Criteria for personal fall arrest systems:

The free-fall distance is limited to 6 feet. The deceleration distance must not exceed 42 inches; lifeline elongation is not included in deceleration distance; and the total fall distance is unregulated except that the employee cannot make contact with a lower level...The safety factor of two should be applied based on the anticipated maximum arrest force, not the fall energy."

SYSTEM DESCRIPTION

The Strongback Stanchion Stabilizing Bar is a device for securing a horizontal lifeline end stanchion in situations where the stanchion must be located at the end of the existing structure leaving little or no room for the attachment of tieback straps or cables. The Strongback Stanchion Bar acts as a compression member to provide necessary anchorage strength for horizontal lifelines. The Bar is secured at one end to the bottom hole of the anchor lug on a 5-, 6-, or 7-ft. tall end stanchion using a bolt. The other end of the Bar is attached to the receiver tube of a top mounted HLL Stanchion Beam Clamp (Model 6230-1 or 6240-1). Once tightened in place, the Strongback Stanchion Stabilizer Bar eliminates the need for tieback straps or cables to help withstand horizontal lifeline loads at the stanchion during fall arrest.

SPECIFICATIONS

Strongback Stanchion Bar Length:	82-in.
Material of construction: Strongback Bar:	zinc-plated steel

NOTE: The Strongback Stanchion Stabilizer Bar may be used with any existing top mounted I-beam Stanchion Beam Clamp (sold separately) to fit the following beam sizes:

Model 6230-1:	28.00-in. maximum
	6.00-in. minimum
	Up to 2.00-in. thick flange
Model 6240-1:	14.00-in. maximum
	6.00-in. minimum
	Up to 2.00-in. thick flange

TYPICAL STRONGBACK STANCHION STABILIZER BAR INSTALLATION

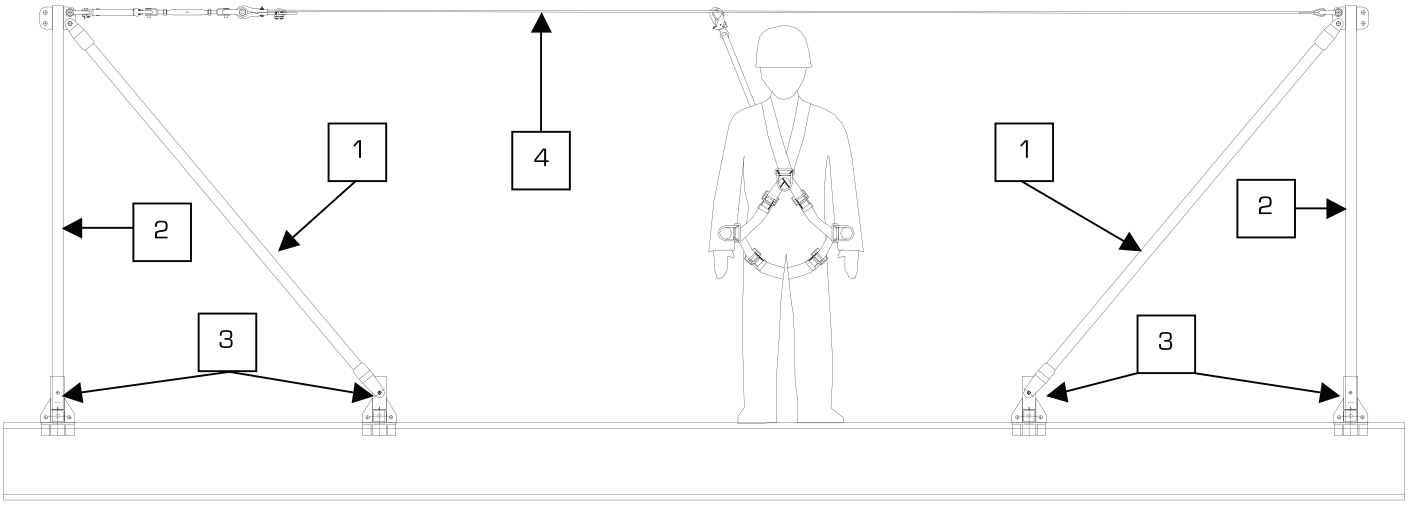


Figure 1

The typical Strongback Stanchion Stabilizer Bar Installation will include many (but not necessarily all) of the following components. Contact Reliance Engineering with questions concerning the suitability of components for your particular system design or site requirements.

1. Strongback Stanchion Bar
2. HLL End Stanchion
3. HLL Stanchion Beam Clamp
4. Skyline™ Horizontal Lifeline

INSTALLATION CONSIDERATIONS

CAUTION: The Strongback Stanchion Stabilizer Bar may be used to connect HLL end stanchions of 5-, 6-, or 7-ft. heights to HLL Stanchion Beam Clamps as a means to provide the needed end anchor strength for Skyline™ Horizontal Lifelines. Neither the Strongback Stanchion Bar nor the Skyline™ Horizontal Lifeline may be used as a personal fall arrest anchorage point until the entire installation procedure has been completed and the system has been certified for use by a Qualified Person.

INSTALLATION PROCEDURES

NOTE: Approved fall protection must be worn at all times during installation of the Strongback Stanchion Stabilizing Bar, or installation must only be undertaken from an area where there exists no possibility of a fall. **DO NOT** use on beams that may dislodge if a fall occurs or that are too small or too long to carry the anticipated loads.

1. Loosen the jaw of the HLL Stanchion Beam Clamp and place over the I-beam flanges at the location where the first horizontal lifeline end stanchion will be located. After squaring the clamp to the beam, tighten the nut to a minimum of 75- to 90-ft. lb. of torque.

2. Drop end stanchion tube into receiver. Verify that the anchor lugs at the top of the stanchion are pointing in the direction where the other lifeline end stanchion will be located. Once in place, secure the stanchion with the bolt and nut.

3. Loosen the jaw of a second HLL Stanchion Beam Clamp and place over the flanges of the I-beam. Verify that the nut of the clamp is pointing in the same direction as the first clamp.

4. Attach the Strongback Stanchion Stabilizing Bar to the lower hole of the anchor lug on the same side of the stanchion where the horizontal lifeline will be attached to. Using the supplied hardware, bolt the narrow opening “dog ears” to the stanchion and secure in place with the ¾-in. bolt and nut.

5. Raise the free end of the Strongback up from the top of the I-beam and slide the HLL Stanchion Beam clamp along the I-beam until it is below the end of the Strongback.

6. Lower the Strongback down onto the receiver tube of the HLL Stanchion Beam Clamp until the holes of the “dog ear” tabs line up with the holes in the Stanchion Clamp. The clamp may need to be slid along the beam surface to help with alignment. Secure the Strongback in place to the HLL Stanchion Beam Clamp with the ½-in. nut and bolt.

7. Slide the HLL Stanchion Beam Clamp/Strongback assembly either towards or away from to help ensure that the end Stanchion is vertical. Once the end stanchion is vertical, tighten the HLL Stanchion Beam Clamp to the I-beam with a minimum Of 75- to 90-ft. lb. of torque.

8. Repeat Steps 1 through 7 for the opposite end of the horizontal lifeline. During installation of the second end of the lifeline make sure that the tightening nuts of the HLL Stanchion Anchor Clamps are pointing in the same direction as those just installed. This helps insure that the lifeline will run straight down the length of the I-beam.

9. Install the Skyline™ Horizontal Lifeline Kit to the end stanchions following the instructions provided with your specific lifeline system.

10. Once the horizontal lifeline has been installed, verify that all fasteners have been properly tightened and retained and that the four HLL Anchor Clamps have been torqued to 75- to 90-ft. lb.

11. The system is ready to use once the load-indicating washer of the Skyline Shock Absorber is spinning freely (see Skyline™ Horizontal Lifeline Installation Manual for more information) and the Qualified Person has determined the lifeline has been positioned properly.

Removal of the Strongback Stanchion Stabilizing Bar is accomplished by following the Installation Procedures in the reverse order. DO NOT begin the removal process until all personnel have located other approved fall arrest anchorage points and have disconnected from the horizontal lifeline that is about to be removed.

TRAINING

It is the responsibility of the employer to train all workers prior to using this system (per OSHA 1926.503 (a)(1)). The employer shall provide a training program for each employee who might be exposed to fall hazards. The program shall enable each employee to recognize the hazards of falling and shall train each employee in the procedures to be followed in order to minimize these hazards.

The employer shall assure that, as necessary, each employee has been trained by a competent person qualified in the following areas:

a. OSHA regulations governing the use of Personal Fall Arrest Systems (PFAS) and their anchorages.
b. Ability to recognize potential fall and workplace hazards.
c. Method of inspection of safety equipment.
d. Rescue procedures.
e. Installation and removal techniques.

PLANNING FOR RESCUE

Prior to system use, a rescue plan must be prepared, the workers must be trained in its use, and the rescue equipment must be on hand to implement it in case of a fall.

Typical rescue plans include (but are not limited to) the following items:

1. List of equipment that must be readily accessible in the event of an emergency and the names of those workers certified to use or operate that equipment.
2. Emergency contact phone numbers (ambulance, hospital, fire department...) and a means to contact them (cell phone, emergency radio).
3. List of employees on the site, and the specific tasks they will perform to effect the rescue.
4. If a confined spacing is to be entered a confined space work permit must be filed and approved.

During installation and use of Personal Fall Arrest Systems, anchorage points should be identified, and clearly marked in such a manner as to provide a means to rescue a worker at any position in the workspace.

INSPECTION

Prior to each use, the worker must inspect the system for any physical damage, wear, corrosion, or malfunctioning parts. All components must be inspected according to the instructions provided with the specific product. If an inspection reveals a problem or unsafe condition, remove the entire system from service until it can be repaired, replaced or re-certified by a competent person.

A formal inspection must be carried out a minimum of once each year, and be formally documented and kept on file with the inspection documents and instruction manuals.

SERVICING

A qualified person trained in the inspection and servicing of system components must carry out servicing of this product. The company's safety officer should maintain a record log of all servicing and inspection dates. This product and all components must be withdrawn from service if subjected to fall arrest forces. Those components may be returned to service only after being certified by a qualified person. Only original Reliance Industries, LLC Products supplied equipment replacement parts are approved for use in this product. Contact Reliance Industries Engineering with questions and when in need of assistance.

WARNINGS AND LIMITATIONS

Proper care should always be taken to visually scan the work area prior to use. Remove any obstructions, debris, and other materials from, and beneath the work area that could cause injuries or interfere with the operation of this system. Be cautious of swing fall hazards if working horizontally to the side of the Skyline™ Horizontal Lifeline. Always use the shortest lanyard length possible to connect to the Skyline™ Horizontal Lifeline.

Users should be familiar with pertinent regulations governing the use of this system and its components. Only trained and competent personnel should install and use this system.

Use only Reliance Industries, LLC supplied or Reliance qualified compatible components.

GUARDING AGAINST APPLICATION FAILURE

To avoid property damage, injury or death, the User must take reasonable steps to prevent "Application Failure". An application failure may be any unacceptable use, misuse, or application error on the part of the User or System Designer. Because each end user might use this product in a manner different from Fall Safe testing platform, and because the User might use this product in combination with other manufacturer's products in a manner not evaluated, contemplated, or tested by Fall Safe, the User or System Designer is ultimately responsible for verifying or validating the suitability and compatibility of this product for use in his application or system.

Whenever questions regarding proper use or compatibility arise, please contact Fall Safe at (303) 424-8650.

If you have any questions regarding the correct installation or use of this product DO NOT USE. Call Fall Safe at Ph. (303) 424-8650 or Fax (303) 424-8670.

INSPECTION LOG FOR THE STRONGBACK STANCHION STABILIZER BAR

Company: _____ Location:_____ Date:_____

Job Site: _____

Describe non-conforming conditions in the boxes below:

Inspection Criteria	Missing Parts	Labels Readable	Corrosion	Deformed Parts
Strongback tube free from cracks				
Dog ears intact and not deformed (4 ea.)				
Strongback tube straight				
Holes in dog ears not oblonged out				
Labels present and readable				

Has a Rescue Plan been prepared?_____

Is Rescue Equipment on hand?_____

Have workers been trained in the Rescue Procedures and been given a copy of the Rescue Plan? _____

_____

Coquitlam, BC V3K 0B3 | Elgin, IL USA 60123
Ph. 1-800-323-7402



WARRANTY: • Warranty policy is that of an implied manufacturer warranty and covers manufacturer's defects and workmanship. This warranty is valid for one year from date of purchase unless otherwise stated • Warranties are limited to the replacement of defective parts. Parts damaged from misuse will not be replaced under the warranty program. SureWerx USA shall be the sole judge of part condition • Warranty does not apply to: (i) cosmetic damage, such as scratches, nicks and dents; (ii) consumable parts, such as batteries, unless product damage has occurred due to a defect in materials or workmanship; (iii) damage caused by accident, abuse, misuse, water, flood, fire, or other acts of nature or external causes; (iv) anticipated wear or damage due to use of the product in the application for which it is marketed; (v) damage to a product that has been modified or altered without the written permission of SureWerx. • Warranty varies by brand and product category. Please contact customer service for specific warranty policies

FALL SAFE™
Ph. 1-800-323-7402

Canada labels
SureWerx, 49 Schooner St.
Coquitlam, BC V3K 0B3

USA labels
SureWerx USA Inc.
Elgin, IL USA 60123

SureWerx®