CURV-O-MARK

QUICK PINS

23611





SELF-CENTERING PIN DESIGN
automatically aligns in 5/8" to 1-5/8" flange holes


QUICK-INSERT
mechanism allows fast setup and removal on the job



REFERENCE LEVELING
points help level flanges for tack and weld-out



ACME THREADED DESIGN
provides maximum clamping power

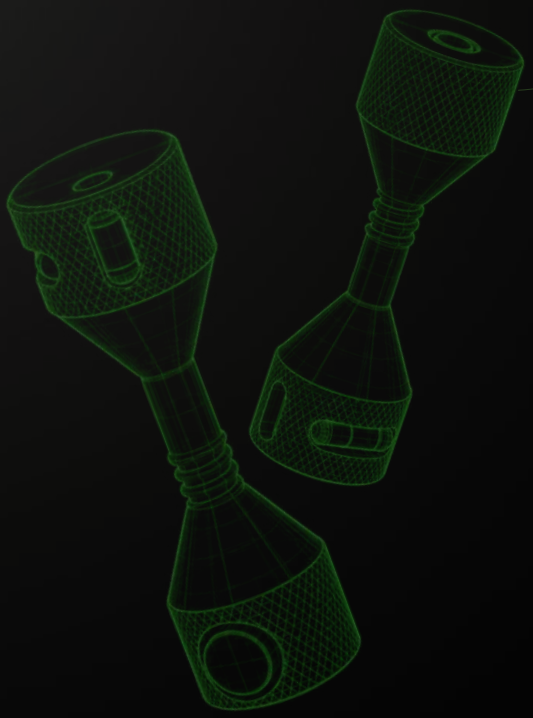

JACKSON SAFETY

SureWerx